


LO206 Rain hood installation

9. Remove the stock Briggs LO206 air filter from the carburetor by loosening the band clamp.
10. Install the larger ring on the air filter aligning the small plastic tab with the metal bar on the bottom of the filter element. (Picture #1)
11. Install the smaller ring on the closed end of the filter aligning the flat in the plastic cap with the print on the filter. (Picture #2)
12. Re-install the filter with rings on the carburetor. (Picture #3) Check fit the hood cable notch clearance and screw-hole alignment adjusting the filter as needed. Tighten the clamp.
13. Slip the rain filter hood over the rings/filter aligning the 2 screw holes (Picture #4)
14. Install the two #8 screws provided. They need to be snug only, **DO NOT** overtighten!!
15. Again, this filter hood assembly has a built in bottom offset for added tire/filter clearance!
16. Now lets' go race in the rain and win with confidence (A good set of rain tires helps too!) 😊

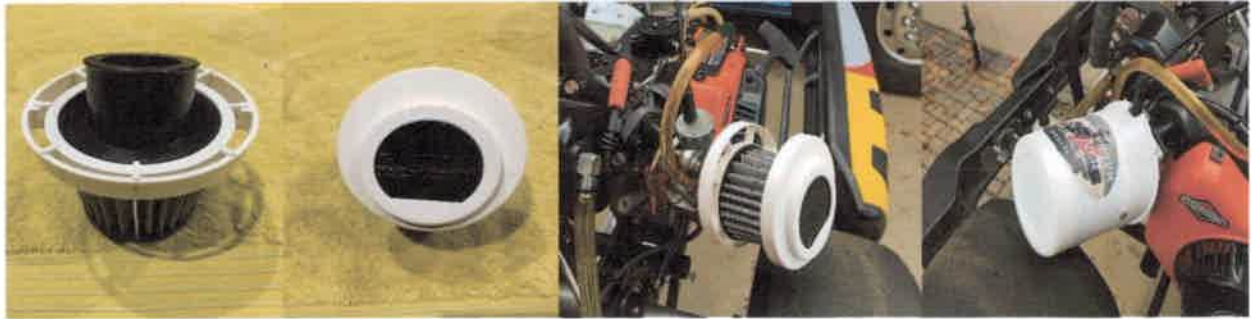

1

2

3

4